


Bench Seat Installation

For Polaris Ranger

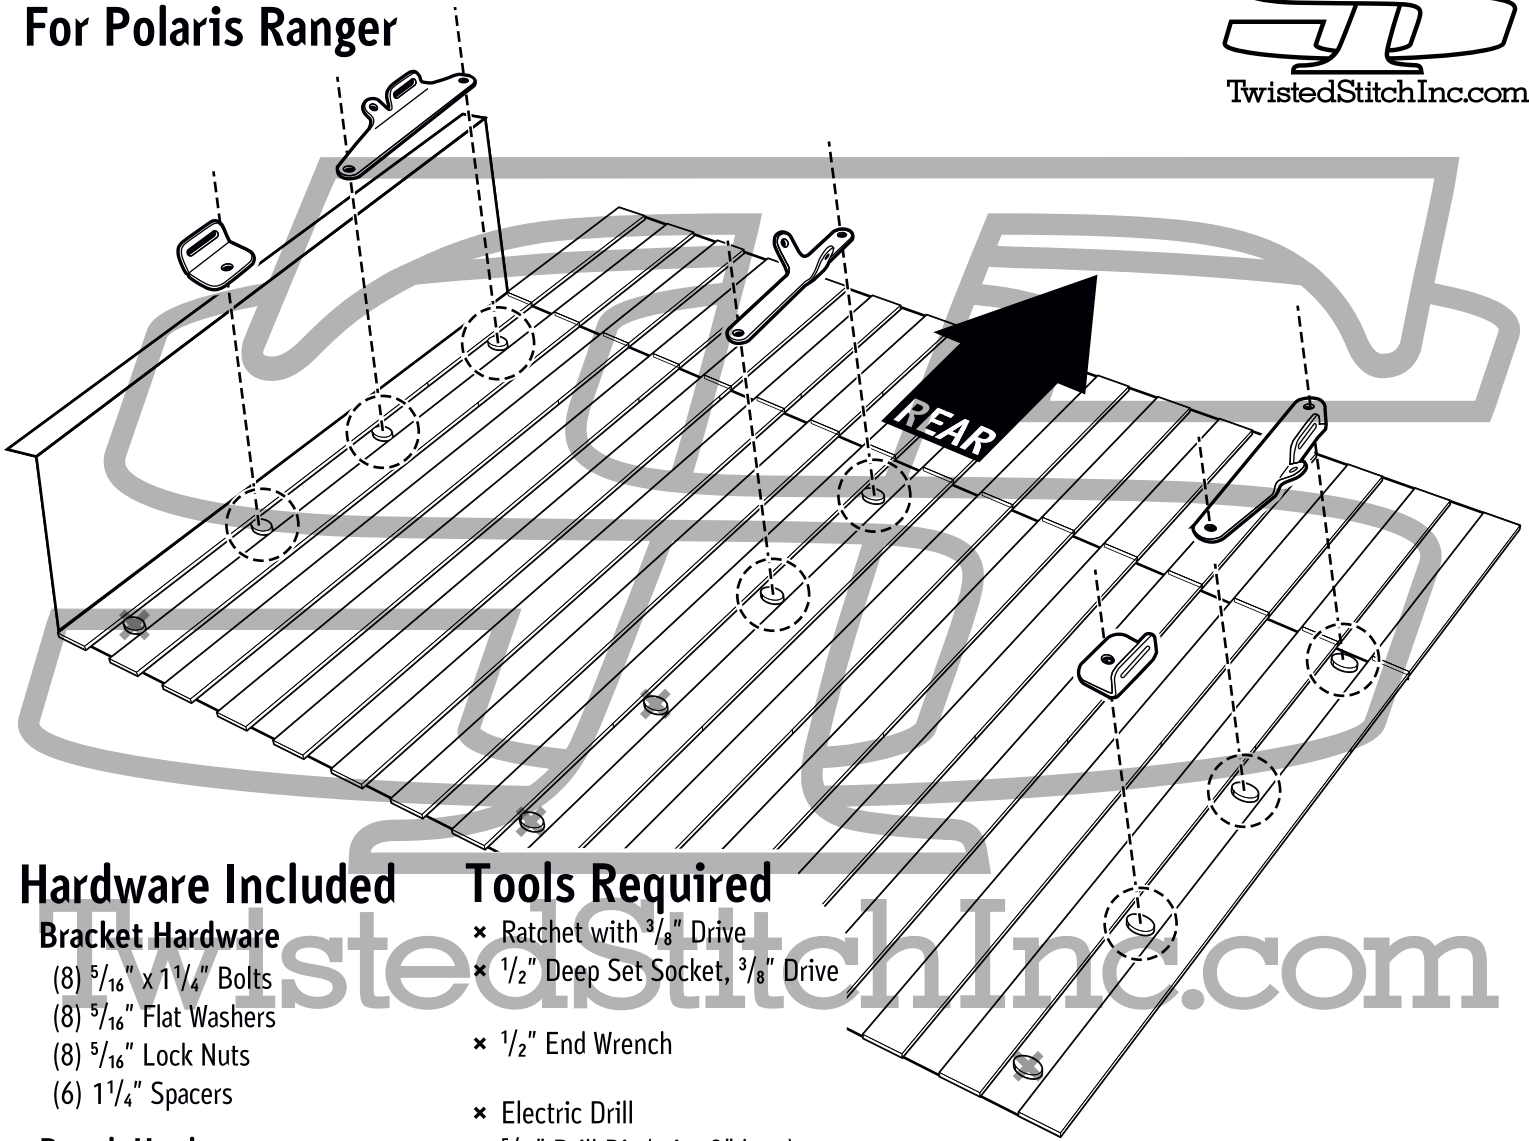

Hardware Included

Bracket Hardware

- (8) $\frac{5}{16}$ " x $1\frac{1}{4}$ " Bolts
- (8) $\frac{5}{16}$ " Flat Washers
- (8) $\frac{5}{16}$ " Lock Nuts
- (6) $1\frac{1}{4}$ " Spacers

Bench Hardware

- (4) $\frac{3}{8}$ " x $1\frac{1}{4}$ " Bolts
- (4) $\frac{3}{8}$ " Flat Washers
- (4) $\frac{3}{8}$ " Lock Nuts

Tools Required

- × Ratchet with $\frac{3}{8}$ " Drive
- × $\frac{1}{2}$ " Deep Set Socket, $\frac{3}{8}$ " Drive
- × $\frac{1}{2}$ " End Wrench
- × Electric Drill
- × $\frac{5}{16}$ " Drill Bit (min. 3" long)

Installation Instructions

1. Remove the circled factory bolts from the bed.
2. Drill out the factory holes, using a $\frac{5}{16}$ " drill bit, through the plastic bed liner and steel bed.
3. Attach the brackets to the bed using the supplied bracket hardware. Place the (6) $1\frac{1}{4}$ " spacers under the outside brackets. No spacers are necessary for the center bracket. Include a flat washer under each bolt head and lock nut.
4. Install the bench to the bracket with the supplied hardware.
5. Check that all bolts are tightened securely.
6. Attach safety harnesses (not included) to the brackets using the manufacturer supplied hardware and specifications.

Twisted Stitch, Inc.

2366 E. Orangethorpe Ave.

Anaheim, CA 92806

PH#: 714-773-0233

FAX: 714-441-0749



Must be used in conjunction with a rear roll cage and safety harness